














- ▶ ECUALIZADORES
- ▶ EQUALIZERS
- ▶ EGALISATEUR
- ▶ EQUALIZADORES
- ▶ ENTZERER



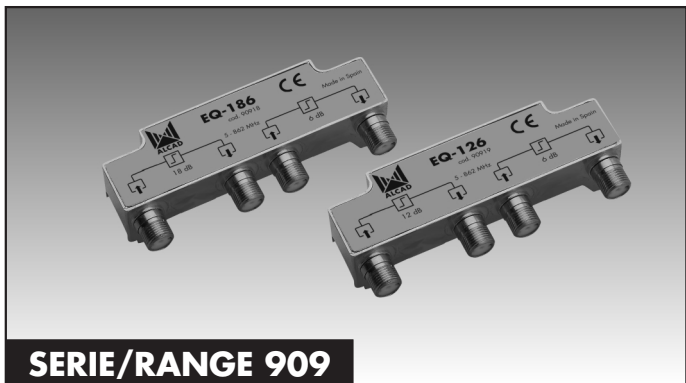


<b>CARACTERISTICAS PRINCIPALES</b>							
<b>MAIN FEATURES</b>							
<b>PRINCIPALES CARACTERISTIQUES</b>							
<b>CARACTERISTICAS PRINCIPAIS</b>							
<b>WESENTLICHE KENNZEICHEN</b>							
CODIGO-CODE-CODE-CODIGO-CODE				90918		90919	
TIPO-TYPE-TYPE-TIPO-TYP				EQ-186		EQ-126	
NUMERO DE ECUALIZADORES NUMBER OF EQUALIZERS NOMBRE D'EGALISATEURS NUMERO DE ECUALIZADORES ANZAHL DER ENTZERER			2				
ECUALIZADORES EQUALIZERS EGALISATEUR EQUALIZADORES ENTZERER			18	6	12	6	
CONECTOR CONNECTOR CONNECTEUR CONECTOR STECKER			F				
RANGO DE FRECUENCIAS FREQUENCY RANGE GAMME DE FREQUENCE RANGO DE FRECUENCIAS FREQUENZBEREICH		MHz	5 - 862				
ATENUACION DE PASO THROUGH LOSS ATTENUATION DE PASSAGE ATENUAÇÃO DE PASSAGEM DURCHGANGSDÄMPFUNG	5 MHz 50 MHz 230 MHz 470 MHz 862 MHz	dB ±0,2	-18,3 -15,8 -10,0 -5,0 -0,6	-8,0 -7,5 -5,3 -3,5 -0,5	-13,8 -12,0 -8,0 -3,8 -0,5	-8,0 -7,5 -5,3 -3,5 -0,5	
PERDIDAS DE RETORNO RETURN LOSS PERTES DE RETOUR PERDAS DE RETORNO RÜCKFLUßDÄMPFUNG	5 MHz 50 MHz 230 MHz 470 MHz 862 MHz	dB	> 21 > 20 > 19 > 18 > 12	> 20 > 21 > 27 > 18 > 25	> 29 > 28 > 35 > 27 > 17	> 20 > 21 > 27 > 18 > 25	
PLANITUD EN BANDA FLATNESS RESPONSE ONDULATION DANS LA BANDE OSCILAÇÃO NA BANDA WELLINGKEIT		dB	0,8	0,4	0,4	0,4	
RETARDO CROMA-LUMINANCIA CHROMA-LUMINANCE DELAY RETARD CHROMA-LUMINANCE RETARDO CROMA-LUMINANCIA FARB- UND HELLIGKEITVERZÖGERUNG		ns	< 1				




- ▶ EQUALIZACION
- ▶ EQUALIZATION
- ▶ PENTE
- ▶ EQUALIZAÇÃO
- ▶ ENTZERRUNG

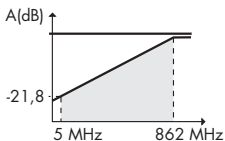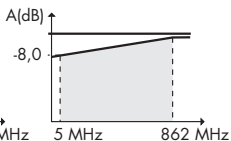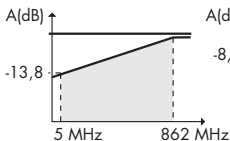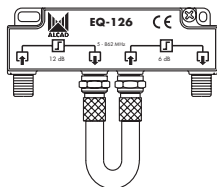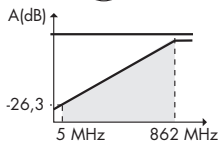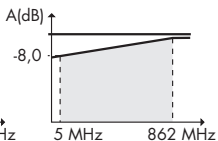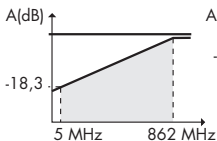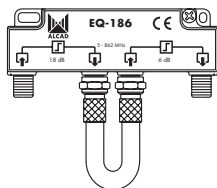


- ▶ COMO PREPARAR LOS CONECTORES F
- ▶ HOW TO PREPARE THE F CONNECTORS
- ▶ COMMENT PREPARER LES CONNECTEURS F
- ▶ COMO PREPARAR OS CONECTORES F
- ▶ KABEL VORBEREITUNG FÜR F-STECKER




- ▶ INSTALACION
- ▶ INSTALLATION
- ▶ INSTALLATION
- ▶ INSTALAÇÃO
- ▶ ANLAGE

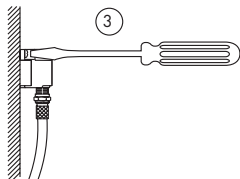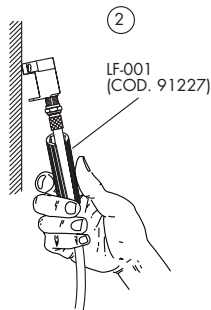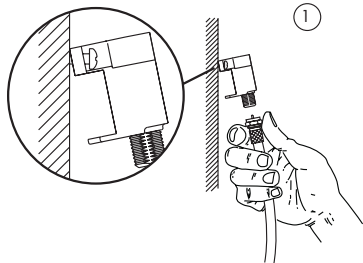

- ▶ CONEXION A TIERRA
- ▶ DOWN TO EARTH CONNECTION
- ▶ MISE A LA TERRE
- ▶ CONEXÃO A TOMADA DE TERRA
- ▶ ANSCHLUß FÜR ERDUNGSKABEL

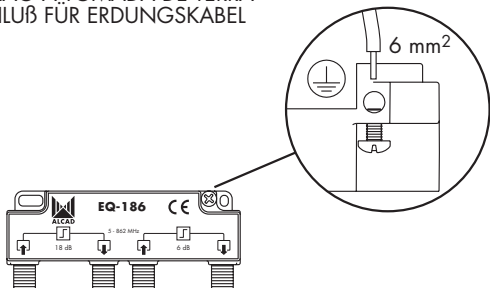

- ▶ MONTAJE EN INTEMPERIE
- ▶ OUTDOORS MOUNTING
- ▶ MONTAGE EXTERNE
- ▶ MONTAGEM EM INTEMPERIE
- ▶ AUßENMONTAGE

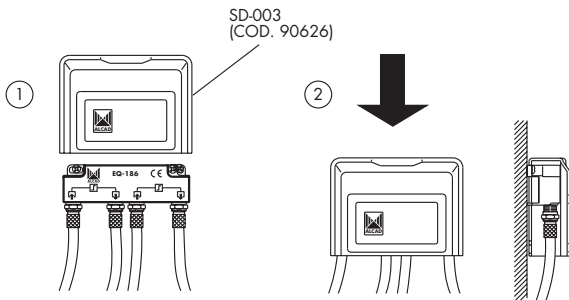


- ▲ ESQUEMAS TÍPICOS
- ▲ CONNECTION DIAGRAMS
- ▲ SCHEMAS DE CONNEXION
- ▲ ESQUEMAS TÍPICOS
- ▲ VERDRAHTUNGSPLAN







200 m (20 dB/100 m 860 MHz)


EQ-186

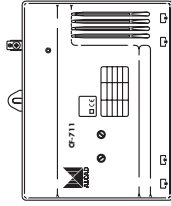

CF-711

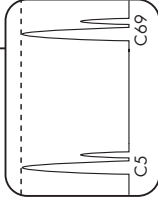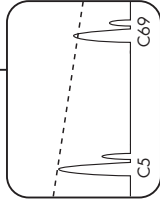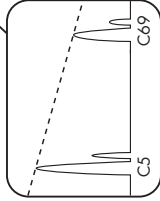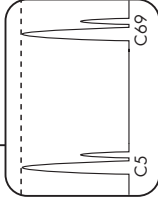

- ▲ ESQUEMAS TÍPICOS
- ▲ CONNECTION DIAGRAMS
- ▲ SCHEMAS DE CONNEXION
- ▲ ESQUEMAS TÍPICOS
- ▲ VERDRAHTUNGSPLAN

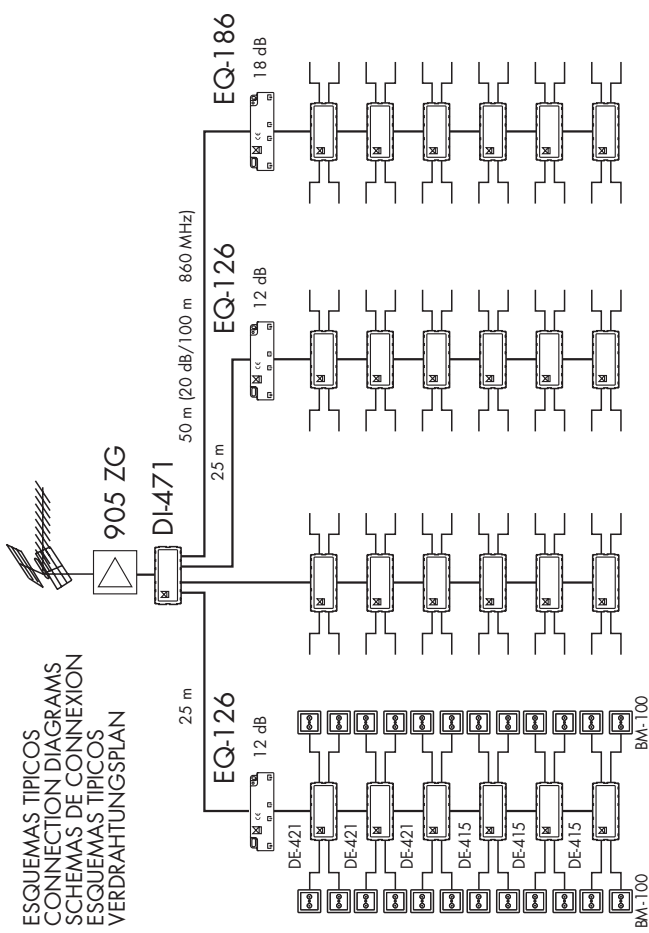

BM-100  
BM-100



# DECLARATION OF CONFORMITY

according to EN 45014

**Manufacturer's Name:** ALCAD, S.A.  
**Manufacturer's Address:** Polígono Industrial de Ventas  
C/Gabiria, 15 - Apdo. 455  
**20305 IRUN** (Guipúzcoa)  
**SPAIN**

declares that the product

**Product Name:** 909 Series: CONNECTING ACCESSORIES  
**Model Number(s):** EQ-126, EQ-186

**Product Option(s):** INCLUDING ALL OPTIONS  
is in conformity with:

Safety: EN50083-1

EMC: EN 50083-2, EN 50081-1 Generic Emission Standard  
IEC 1000-4-3:1995 / EN 50082-1:1992 3V/m  
IEC 801-4:1988 / EN 50082-1:1992 0.5kV Sig. Lines, 1kV Power Lines

Technical Features : EN50083-4

## Supplementary Information:

The product herewith complies with the requirements of the Low Voltage Directive 73/23/ECC, and the EMC Directive 89/336/EEC and their relevant amendments, gathered under the directives 93/68/EEC.

Note: to comply with these directives, do not use the products without covers and operate the system as specified.



Irún,

28-09-99

Date

Anton Galarza / General Manager



**ALCAD, S.A.**  
Tel. 943 63 96 60  
Fax 943 63 92 66  
Int. Tel. +34 - 943 63 96 60  
alcad001@sarenat.es  
Apdo. 455 - C/GABIRIA, 15  
**20305 IRUN** - Spain  
Tel. 01 - 716 10 36/716 40 94  
Fax 01 - 716 41 09  
R. Dr. JOAQUIM MANSO, 12A  
**1500 LISBOA** - Portugal

Tel. 00 34 - 943 63 96 60  
Fax 00 34 - 943 63 92 66  
B.P. 284  
**64702 HENDAYE** - France

Tel. 080 38 - 91 73  
Fax 080 38 - 91 74  
HOLZHAUSEN, 11  
**83556 GRIESSTATT** - Deutschland



ISO 9001

